



Note: The two connectors are a male & female pair.
The male of this extender lead connecting with the
ABS sensor connector.

Part Number	Cable length between sockets-A-metres	Tolerance mm.	Part Number	Cable length between sockets-A-metres	Tolerance mm.
GS-0200	2.50	100	GS-0200G	3.50	100
GS-0200A	5.00	100	GS-0200H	3.81	100
GS-0200B	0.50	50	GS-0200J	4.00	100
GS-0200C	0.76	50	GS-0200K	6.00	100
GS-0200D	1.78	50	GS-0200L		
GS-0200E	2.30	100	GS-0200M		
GS-0200F	3.00	100	GS-0200N		